T753C

T753C
Type: Family size Condenserdryer Line Series™ Classic
Colors: White or Titanium

PROGRAMS
Auto heavy, Auto normal, Auto delicate,
Auto iron dry, Timed dry and Air fluff

OPTIONS
Anti-Crease, Low temperature, Delay Start (24 hrs) and TimeSaver™ cool down

CAPACITY
UltraCare - family size capacity

ENVIRONMENTAL
Energy efficient, Majority of manufacturing components labelled for recycling and Certified ISO14001 for environmental quality

TECHNOLOGY
Line Series™ Classic control with LCD display, SensiDry-sensor, Butterfly™ drying system, Double lint filter and Cleanable fan

CONSTRUCTION
Stainless Steel drum, Ball bearing suspension, Heavy duty life-tested motor, Galvanized steel base and Rear panel

SIMPLICITY/COMFORT
Line Series™ Classic control with LCD display, Program memory, Stacking kit included, Reversible door, Easy clean condenser and 69 dB(A) noise level

SAFETY
KidSafe – child-safe start option

WARRANTY
Industry leading 2 Plus 1 warranty – up to three years parts and labor protection

2 PLUS 1 WARRANTY ASKO

ASKO

ASKO Appliances, Inc. • P.O. Box 940609 • Plano, TX 75094-0609

Family Size Dryer - Line Series

T753C Condenser Dryers (Ventless)

Unit Dimensions

	US	METRIC
HEIGHT	33-1/2"–34-1/2"	850–876 mm
WIDTH	23-1/2"	597 mm
DEPTH: T753C	23-7/8"	606 mm
DEPTH W/DOOR OPEN: T753C	46-1/8"	1172 mm
WEIGHT	104 lbs	47 kg

**Includes control knob.*
***Does not include accessory door panel.*

Technical Data

Supply voltage	Single-phase 220 V, 60 Hz
Heating element	3000 W

NOTE: *When on a separate outlet, use 220 V, 20 Amp single-phase circuit. When an ASKO washer is connected, use 220 V, 30 Amp single-phase circuit.*

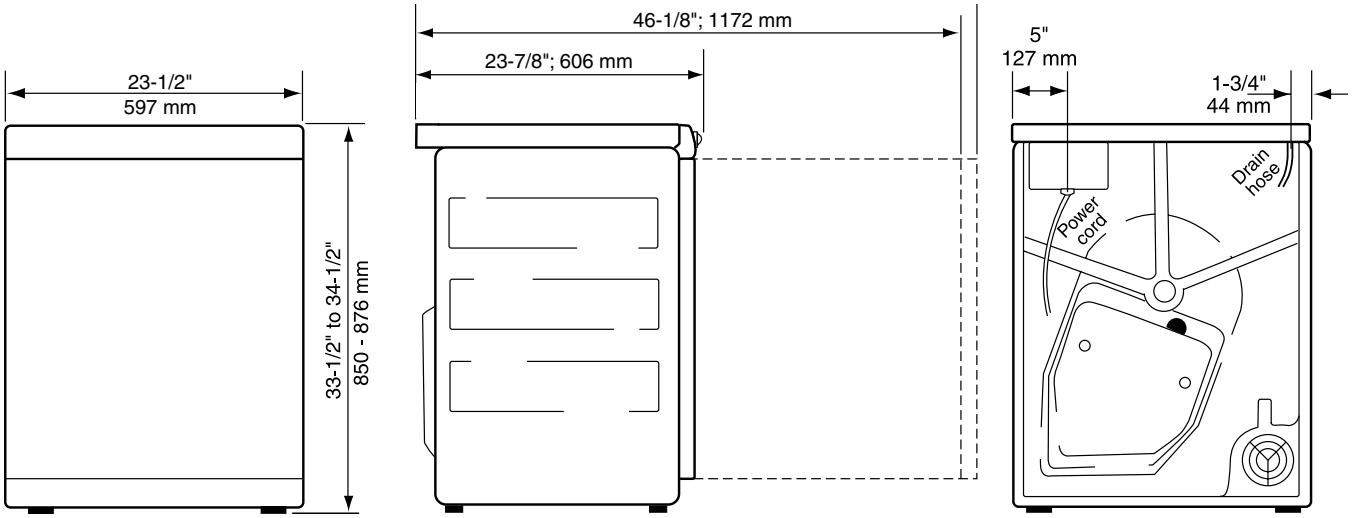

The door hinges on ASKO dryers are shipped left-hinged, but they are reversible. See the *ASKO Dryer Use and Care Guide* for more information.

When placing the dryer next to a wall or cabinet, be sure to leave 1/2" (12 mm) of space between the dryer and the wall or cabinet.

NOTE: *Condenser dryers require adequate ventilation for proper operation.*

NOTE: *A louvered door is recommended for closet installations.*

See page 38 for stacked washer/dryer dimensions.

See pages 42-44 for cutout dimensions for closet and under-cabinet installations.

NOTE: *Power cord not supplied with unit.*

NOTE: *The drain hose must not be more than 40" above the floor or the bottom of the unit.*

Condensation Drain Requirements

You must install the dryer so the condensed water will continuously flow into a drain or sink. To do this, follow the instructions below:

1. Disconnect the short hose (1) from the blue connection. (It's okay to let the hose hang down.)
2. Connect the rubber hose supplied with the dryer to the blue nipple (2).
3. Run the hose to a drain or sink, as illustrated.

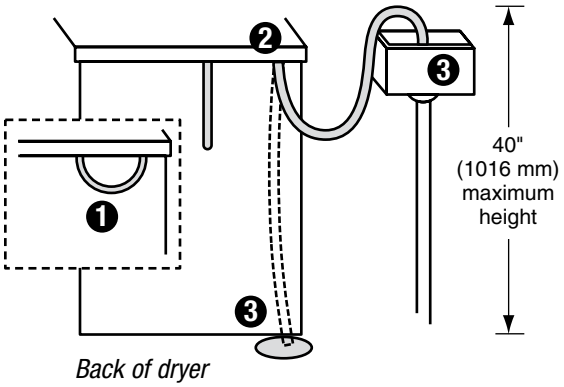

Back of dryer

Specifications are subject to change without notice. See installation instructions for additional details.